


FIG.2

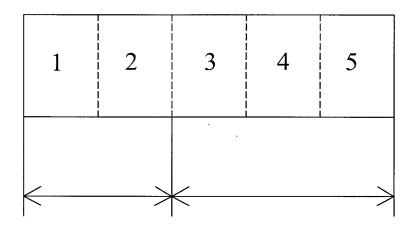

CODE FOR FREQUENCY SELECTION

CTCSS TONE CODE & DCD CODE TABLE

FIG.3

FREQUENCY DIVIDED INTO COUNTRIES

FREQ. TABLE(KOR)				
CH	CH FREQ. [MHz]			
01	448.7500			
02	448.7625			
03	448.7750			
04	448.7875			
05	448.8000			
06	448.8125			
07	448.8250			
08	448.8375			
09	448.8500			
10	448.8625			
11	448.8750			
12	448.8875			
13	448.9000			
14	448.9125			
15	448.9250			
16	448.9375			
17	448.9500			
18	448.9625			
19	448.9750			
20	448.9875			
21	449.0000			
22	22 449.0125			
23	449.0250			
24	449.0375			
25	449.0500			

EDEC TABLECTICAL			
FREQ. TABLE(U.S.A)			
CH	FREQ. [MHz]		
01	462.5625		
02	462.5857		
03	462.6125		
04	462.6357		
05	462.6625		
06	462.6857		
07	462.7125		
08	467.5625		
09	467.5875		
10	467.6125		
11	467.6375		
12	467.6625		
13	467.6875		
14	467.7125		

FREQ. T	ABLE(NEWZL'D)
CH	FREQ. [MHz]
01	476.4250
02	476.4500
03	476.4750
04	476.5000
05	476.5250
06	476.5500
07	476.5750
08	476.6000
09	476.6250
10	476.6500
11	476.6750
12	476.7000
13	476.7250
14	476.7500
15	476.7750
16	476.8000
17	476.8250
18	476.8500
19	476.8750
20	476.9000
21	476.9250
22	476.9500
23	476.9750
24	477.0000
25	477.0250
26	477.0500
27	477.0750
28	477.1000
29	477.1250
30	477.1500
31	477.1750
32	477.2000

21	477.1250
22	477.1500
23	477.1750
24	477.2000
FREQ.	TABLE(TAIWAN)
CH	FREQ. [MHz]
01	467.5125
02	467.5250
03	467.5375
04	467.5500
05	467.5625
06	467.5750
07	467.5875
08	467.6000
09	467.6125
10	467.6250
11	467.6375
12	467.6500
13	467.6625

467.6750

FREQ. TABLE(AUS)
CH | FREQ. [MHz]

01

02 03

04

05

06

07

08

09 10

11

12

13

14

15

16

17

18

19

20

476.6250

476.6500

476.6750 476.7000

476.7250

476.7500

476.7750

476.8000

476.8250

476.8500 476.8750

476.9000

476.9250

476.9500

476.9750

477.0000

477.0250

477.0500

477.0750

477.1000

	FREQ. TABLE(SINGAPOL)				
CH	FREQ. [MHz]	CH	FREQ. [MHz]		
01	433.8000	06	433.9250		
02	433.8250	07	433.9500		
03	433.8500	08	433.9750		
04	433.8750	09	434.0000		
05	433.9000	10	434.0250		

477.2250

477.2500

477.2750

477.3000 477.3250

477.3500

477.3750

477.4000

33

34

35 36

37

38

39

40

FIG.4

CTCSS TONE CODE TABLE			
	NO TONE PREQUENCY [Hz]		
000	NO CTCSS		
001	67.06		
002	69.37		
003	71.84		
004	74.33		
005	76.99		
006	79.65		
007	82.50		
008	85.34		
009	88.62		
010	91.38		
011	94.88		
012	97.46		
013	99.87		
014	103.39		
015	107.17		
016	110.85		
017	114.80		
018	118.60		
019	123.12		
020	127.50		
021	131.67		
022	136.69		
023	141.48		
024	145.96		
025	151.45		
026	156.59		
027	162.10		
028	168.01		
029	173.43		
030	180.21		
031	186.46		
032	193.16		
033	202.88 206.78		
034 035	206.78		
035	210.84 217.96		
036	217.96 225.58		
037	233.75		
038			
039	250.06		
L 040	230.00		

FIG.5

	DCD CODE TABLE			
NO	CODE	NO	CODE	
000	NO DCD	541	306	
501	023	542	311	
502	025	543	315	
503	026	544	331	
504	031	545	343	
505	032	546	346	
506	043	547	351	
507	047	548	364	
508	051	549	365	
509	054	550	371	
510	065	551	411	
511	071	552	412	
512	072	553	413	
513	073	554	423	
514	074	555	431	
515	114	556	432	
516	115	557	445	
517	116	558	464	
518	125	559	465	
519	131	560	466	
520	132	561	503	
521	134	562	506	
522	143	563	516	
523	152	564	532	
524	155	565	546	
525	156	566	565	
526	162	567	606	
527	165	568	612	
528	172	569	624	
529	174	570	627	
530	205	571	631	
531	223	572	632	
532	226	573	654	
533	243	574	662	
534	244	575	664	
535	245	576	703	
536	251	577	712	
537	261	578	723	
538	263	579	731	
539	265	580	732	
540	271	581	734	
		582	743	
		583	754	

